



- LIST OF UNITS -

1	L.H. front sidelight and direction indicator	40	Brake warning light wire junction
2	L. H. front headlight	42	Gusset earth (ground)- window winder
3	L.H. inner headlight (R.1152-1153-R.1155 US)	43	L.H. front brake pad
4	L.H. horn	44	L.H. front brake pad junction terminal
5	L.H. Q.I.driving light (R.1151-R.1154)	45	Scuttle junction plate
6	R.H. Q.I.driving light (R.1151-R.1154)	46	Windscreen wiper
7	R.H. horn	47	Heater fan
8	R.H. inner headlight (R.1152-R.1153-R.1155 US)	48	R.H. front brake pad junction terminal
9	R.H. front headlight	49	R.H. front brake pad
10	R.H. front sidelight and direction indicator	50	L.H. door pillar switch
11	L.H. front sidelight wire junction (R.1152-R.1153-R.1155 US)	51	Pedal operated dipswitch (R.1152-R.1153-R.1155 US)
12	R.H. front sidelight wire junction (R.1152-R.1153-R.1155 US)	52	Flasher unit
13	L.H. front catseyes reflector (R.1152-R.1153-R.1155 US)	53	Headlight main beam "on" tell-tale
14	Reversing lightswitch	54	Ignition key "in position" tell-tale (R.1152-R.1153-R.1155 US)
15	Cooling fan motor	55	Instrument panel lighting
16	Temperature switch on radiator	56	Brake pad wear-handbrake 'on' warning light
17	R.H. front catseyes reflector (R.1152-R.1153-R.1155 US)	57	Fuel gauge
18	Cooling fan motor relay	58	Choke 'on' warning light
19	Battery	59	Oil pressure-water temperature
20	Ignition coil	60	Voltmeter
21	Centrifugal switch (R.1152 US)	61	Direction indicator tell-tale
22	Alternator	62	Water temperature gauge (R.1151-R.1154-R.1156)
23	Oil pressure switch	63	Q.I. driving lights switch (R.1151-1154)
24	Solenoid flap valve (R.1152-R.1153-R.1155 US) (fast idling)	64	Heated rear screen switch
25	Solenoid flap valve (R.1153-R.1155 US) (distributor vacuum)	65	Windscreen wiper switch
26	Front junction plate (+ direct)(R.1151-R.1154)	66	Heated rear screen tell-tale
27	Regulator	67	Q.I. driving lights tell-tale (R.1151 - R.1154)
28	Q.I. driving lights relay (R.1151-R.1154)	68	Revolution counter (R.1151-R.1154-1156)
29	Sunroof relay	69	Speedometer
30	Window winder relay (R.1151-R.1154)	70	Sunroof switch
31	Fusebox	71	L.H. window winder switch (R.1151-R.1154-R.1156)
32	Stoplight switch	72	R.H. window winder switch (R.1151-R.1154-R.1156)
33	Brake pressure drop switch (R.1152-R.1153-R.1155 US)	73	Clock (R.1151-R.1154-R.1156)
34	Distributor	74	Clock illumination (R.1151-R.1154-1156)
35	Temperature or temperature sender switch	75	Instrument panel lighting rheostat
36	Idling speed damper (R.1152 US)	76	Heater fan motor rheostat
37	Starter	77	R.H. door pillar switch
38	Dipped beam wire junction (R.1156)	78	'Hazard' warning lights system switch (R.1152-R.1153-R.1155 US)
39	Main beam wire junction (R.1152-R.1153-R.1155 US - R.1156)	79	Brake pressure drop warning light bulb checking switch (R.1152-R.1153-1155 US)